

Boots Film Service

Boots offer a comprehensive quality processing service for both black and white and colour.

- Extra Prints — for family and friends.
- Enlargements — your best prints will look even better enlarged. — Selective enlargements are also available.
- Prints and Enlargements from transparencies, also duplicate transparencies.
- Prints from Prints — a low priced service, ideal for instant camera owners with no need for negatives.




Please ask for details and prices.



326X Camera



INSTRUCTIONS

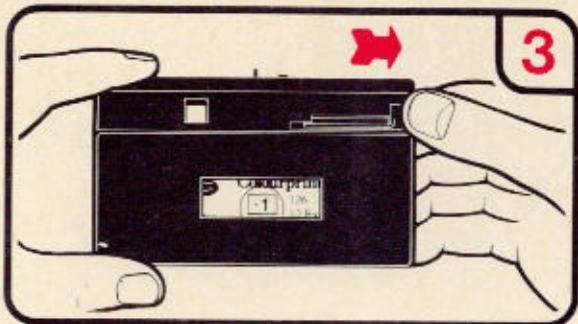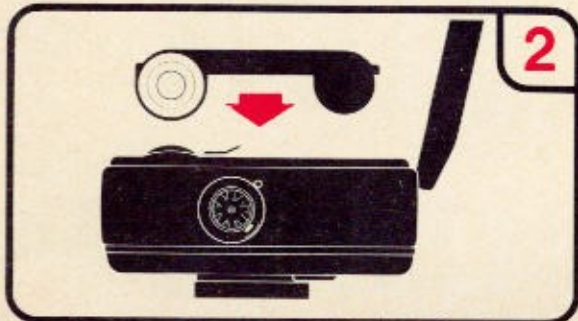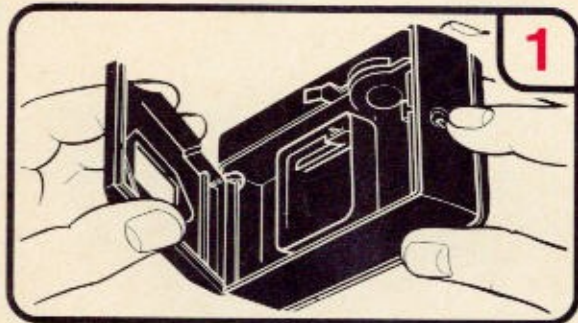

Introduction



Your Boots 326X is a modern instant load camera designed to take photos easily both indoors and outside. Takes 126 cartridge film.

LOADING THE CAMERA

- 1** Depress the button at the side of the camera, and open the back fully.
- 2** Drop in the film cartridge, and close the back cover ensuring it is firmly shut. It is impossible to insert a cartridge incorrectly.

- 3** Advance the lever wind until the film locks on exposure number one.

- 4** **Outdoor Pictures**
Set the upper dot on the outer ring opposite the appropriate weather symbol.

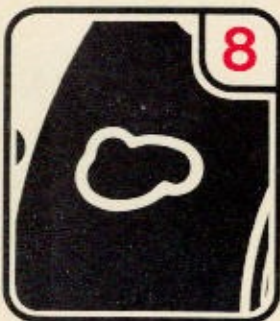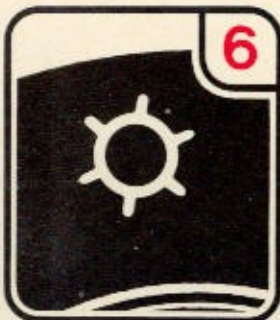


5 Bright sun at the seaside or on snow.

6 Bright sun (distinct shadows).


7 Weak, hazy sun (soft shadows).

8 Cloudy-bright (no shadows).

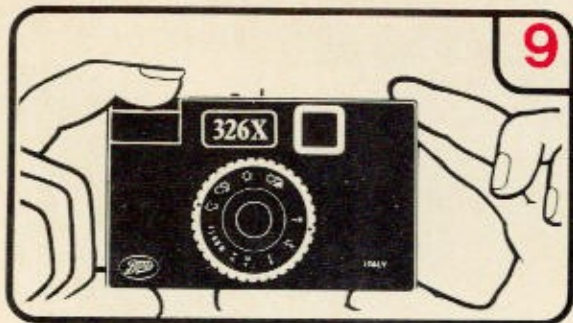

9 Hold the camera close to the eye and view the subject through the viewfinder.


10 Depress the shutter its full stroke until a click is heard. Remember to hold the camera steady and not to jerk the shutter release.

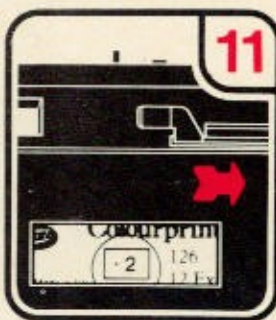

11 Wind on the film until the next exposure locks. The camera has a double exposure prevention, and therefore is unable to take another photo until the film has been wound on.

Points to Remember


- Do not let the sun shine directly into camera lens.
- Try to take pictures with the sun behind you, so the subject is well lit.
- Pictures of moving objects will be blurred.

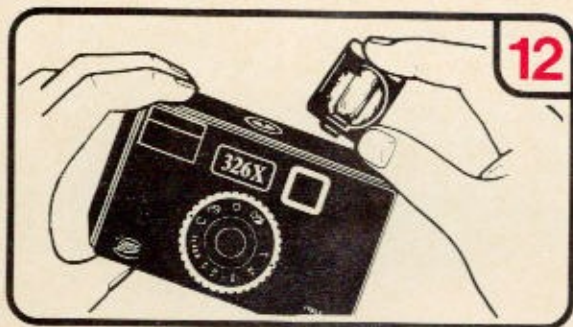

12


12 Flash Pictures

Insert a Magicube into the socket on top of the camera. Estimate the distance of subject to camera.

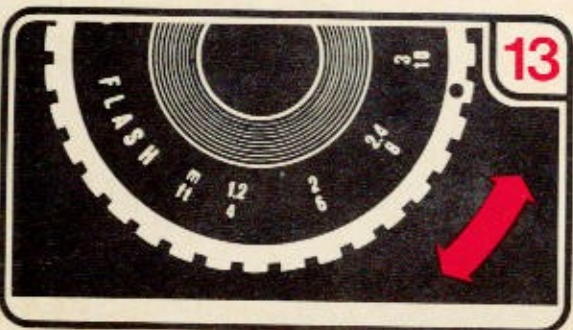

13

- 13 Set the distance on the flash scale. The subject must be between 4 and 9 feet (1.2 and 3 m). When the film is wound on, the Magicube will automatically turn onto the next bulb. A Magicube has four flashes.

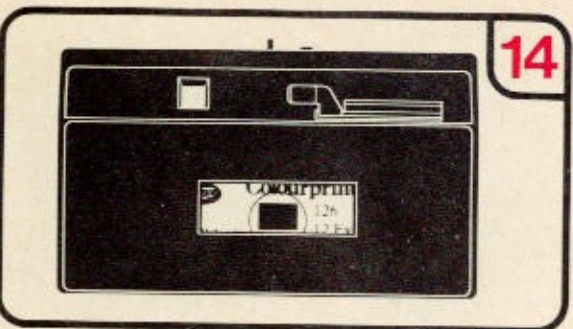


14

14 Unloading the Camera

After the last exposure, wind on the film until the film window is black.

- 15 Open the camera back and remove the film cartridge for processing. It is advisable, especially with colour emulsions, to have the film processed immediately.

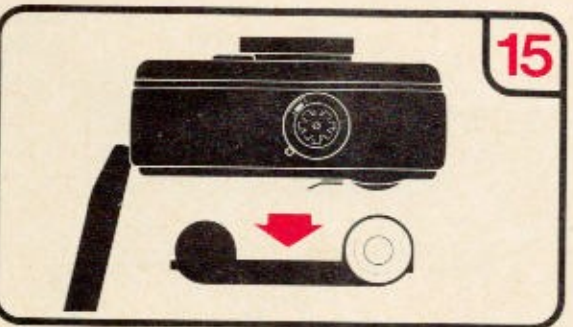

15

Camera Care

To protect your camera, we recommend the Boots 326X Ever-Ready carry case. Do not expose the camera to excessive heat or humidity, and be careful not to allow sand and grit to penetrate into the internal mechanism. Clean the lens with a soft camel hair brush and a lens cleaning cloth.

Service can be arranged through any Boots Branch.